

The ProTac® 2.0 Rail Mount series ships with a rechargeable SL-B50® Li-Ion battery.

NOTICE

Charge battery before first use.

CHARGING

FROM CHILDREN. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. IN FIRE, USE ONLY WITH THE SPECIFIED STREAMLIGHT PRODUCTS. KEEP AWAY FROM CHILDREN. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

▲CAUTION

EXPLOSION RISK, BURN, AND FIRE HAZARD. DO NOT DISASSEMBLE, CRUSH, SHORT CIRCUIT, HEAT ABOVE 140°F (60°C), OR DISCARD BATTERY SAFETY

Any LED flashlight of similar size and performance will produce similar amounts of heat during operation. The only way to reduce operating heat is to SIGNIFICANTLY lower the output or increase the size of the flashlight. While this heating may trigger the drop reflex if an unattended hot light is picked up, the temperature does not present a burn hazard. When used tactically for short periods of time to clear a room, check for intrud-

ers, etc., heating will not be a problem.

▲CAUTION

STROBE MODE MAY CAUSE SEIZURES IN PERSONS WITH PHOTOSE-

▲CAUTION

HARMFUL TO EYES. PER IEC 62471 ED 1.0:2006-07.

▲WARNING RISK OF INJURY. THE USE OF SUBSTANDARD OR AFTERMARKET COMPONENTS, MODIFICATIONS TO THE ORIGINAL PARTS, OR USE OF THIS FLASHLIGHT WITH ANY INCOMPATIBLE PRODUCT MAY VOID WARRANTY AND COULD LEAD TO PRODUCT FAILURE OR PERSONAL INJURY.

THE TRIGGER GUARD.

ACTIVATE THE FLASHLIGHT WITH THE NON-TRIGGER HAND WHILE EMPLOYING A TWO-HAND GRIP ON THE FIREARM AND WITH THE TRIGGER FINGER OUTSIDE OF CLEANING, ADJUSTING AIM, MAINTAINING, OR REMOVING THE FLASHLIGHT. ONLY THE FIREARM IS UNLOADED AND THE BREACH IS OPEN WHEN INSTALLED.

▲WARNING

ACCIDENTAL DISCHARGE OF A FIREARM MAY RESULT IN SERIOUS INJURY, DAMAGE TO PROPERTY, OR DEATH. MAKE SURE THAT

THE FLASHLIGHT AND THE FIREARM MANUFACTURER'S SAFETYOPERATING INSTRUCTIONS, NEVER HANDLE A FIREARM UNLESS YOU HAVE RECEIVED QUAL-

IFIED TRAINING. SAFETY MEASURES MUST BE EMPLOYED AT ALL TIMES. NEVER POINT THE FIREARM AT SOMETHING YOU DO NOT INTEND TO SHOOT.

▲WARNING

HANDLING A FIREARM CAN BE DANGEROUS AND MAY RESULT IN SERIOUS INJURY, DAMAGE TO PROPERTY, OR DEATH. FOLLOW BOTH THE FLASHLIGHT AND THE FIREARM MANUFACTURER'S SAFETYOPERATING INSTRUCTIONS. NEVER HANDLE A FIREARM UNLESS YOU HAVE RECEIVED QUAL-

IFIED TRAINING. SAFETY MEASURES MUST BE EMPLOYED AT ALL TIMES. NEVER POINT THE FIREARM AT SOMETHING YOU DO NOT INTEND TO SHOOT.

SAVE THESE INSTRUCTIONS. This guide contains important safety and operating instructions for your ProTac® 2.0 Rail Mount.

Thank you for selecting the ProTac® 2.0 Rail Mount or the ProTac® 2.0 Rail Mount HP weapon-mounted flashlight. As with any professional tool, reasonable care and maintenance of this product will provide years of dependable service. Please read this manual before using the ProTac® 2.0 Rail Mount.


IMPORTANT: FULLY CHARGE BATTERY PACK BEFORE FIRST USE.

ENGLISH



IMPORTANT: FULLY CHARGE BATTERY PACK BEFORE FIRST USE.	IMPORTANT : CHARGER LA BLOC-PILE COMPLÈTEMENT AVANT LA TOUTE PREMIÈRE UTILISATION.
--	--

IMPORTANTE: CARGUE EL PAQUETE DE PILAS COMPLETAMENTE ANTES DE USARLA POR PRIMERA VEZ.	WICHTIG: LADEN SIE DAS BATTERIEPACK VOR DEM ERSTEN GEBRAUCH VOLL AUF.
---	---

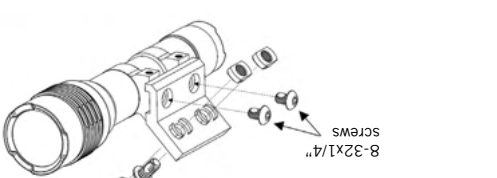

Align the M-LOK® mount holes with the ProTac® 2.0 Rail Mount holes and use the 3/32" hex wrench to tighten the 8-32x1/4" screws.



To use the M-LOK® mount, replace the 1913 rail clamp by removing the two mounting screws using a 2mm hex wrench and loosening the thumb wheel fully.

For the 1913 rail, rotate the thumb wheel until the clamp is fully open. Slip the clamp over the 1913 rail of the weapon and retighten the thumb wheel securely.

The rail clamp is designed to rapidly and securely attach/detach from rifles, carbines and sub machine guns with a MIL Standard 1913 or M-LOK® rail".

MOUNTING

Charge time is approximately 6 hours when using Streamlight AC adapters.

- Charging...Red LED is on.
- Charged...Green LED is on.

LED Charge Indicators

located on the battery adjacent to the USB-C plug. port and plug the other end of the cord into a power source. LED charge indicators are based of the head to uncover the USB-C port. Plug the USB-C connector into the USB-C base of the head to uncover the rail. Slide down the access rail at the

To charge inside the light, first turn off the light. Slide down the access rail at the base of the head to uncover the USB-C port. Plug the USB-C connector into the USB-C port and plug the other end of the cord into a power source. LED charge indicators are plugged into a USB-C cable continuously, there is no danger of overcharge.

The SL-B50® battery can be charged outside the light or while installed. The battery

itself contains charge circuitry and indicators for charging. The battery may be left options or proper disposal (In USA: RBRC).

The SL-B50® battery is recyclable. At the end of its useful life, under various country

and state laws, it may be illegal to dispose of this battery in the municipal solid waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal (In USA: RBRC).

The SL-B50® battery is recyclable. At the end of its useful life, under various country and state laws, it may be illegal to dispose of this battery in the municipal solid waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal (In USA: RBRC).

Mithilfe des Feldes rufen Sie den gewünschten Modus auf und drücken dann die Einrasttaste für Dauerbetrieb. Bitte beachten Sie, dass dauerhaft eingeschaltete Schalter miteinander in Konflikt stehen können, wenn Sie den einrastenden externen Schalter verwenden. Wenn der Strahler sich nicht ausschalten lässt, vergewissern Sie sich bitte, dass sowohl der externe Schalter als auch der Schalter an der Endkappe ausgeschaltet sind.

Es ist wichtig, dass der Dichtring an der Endkappe stets ein wenig gefettet ist. Der Spannbolzen der Schienenklemme der ProTac® 2.0 Rail Mount-Serie muss mit hochwertigem Waffelnöl behandelt werden, um ihn rostfrei zu halten.Reinigen Sie die gläserne LED-Linse mit einem weichen Lappen und einem sanften Reinigungsmittel und halten Sie sie schmutz- und schmauchfrei.

Vermeiden Sie aggressive Reinigungslösungen, da diese die Taschenlampe beschädigen können. Wenn Sie Munition verschießen, bei der die Projektile eine freiliegende Bleibasis haben, kann sich Blei auf Linse und Reflektor niederschlagen. Dieser Niederschlag kann mit feiner Stahlwolle von der Linse entfernt werden. Es ist äußerst schwierig, den Bleiniederschlag vom Reflektor zu entfernen. Umwickeln Sie die Reflektor-Außenseite mit PVC-Klebeband, um die Entstehung von Bleiniederschlägen zu verhindern.

Streamlight Taschenlampen sind dazu vorgesehen, als tragbare Hochleistungs-Lichtquellen für harte Einsätze verwendet zu werden. Der Hersteller rät ausdrücklich davon ab, Streamlight Taschenlampen für andere Zwecke als als Lichtquelle zu verwenden. Für andere Verwendungen als empfohlen lehnt Streamlight ausdrücklich jede Haftung ab.

Achten Sie darauf, ausschließlich Original-Ersatzteile von Streamlight zu verwenden, um die Produktsicherheit zu gewährleisten. Andere Teile könnten die Produktzulassung ungültig machen. Versuchen Sie nicht, das Gerät selbst zu reparieren. Schicken Sie es an eine qualifizierte Werkstatt oder ins Werk zurück.

Streamlight garantiert, dass dieses Produkt während eines gesamten Verwendungslbens frei von Mängeln ist. Ausgenommen sind Batterien und Glühbirnen. Missbrauch und normaler Verschleiß. Wir werden dieses Produkt reparieren, ersetzen oder den Kaufpreis zurückerstatten, wenn wir feststellen sollten, dass es mangelhaft ist. Ebenfalls von dieser eingeschränkten lebenslangen Garantie ausgenommen sind wiederaufladbare Batterien, Ladegeräte, Schalter und die Elektronik, für die eine zweijährige Garantie mit Kaufnachweis gilt. **DIES IST DIE EINZIGE AUSDRÜCKLICHE ODER IMPLIZITE GARANTIE EINSCHLIESSLICH EINER ETWAIGEN GARANTIE DER MARKTBLICHLICHKEIT ODER EIGNUNG FÜR EINEN BESTIMMTEN ZWECK. ERSATZ FÜR BEILÄUFIGE SCHÄDEN ODER FOLGSCHEITEN UND BESONDERER SCHADENSERSATZ WERDEN AUSDRÜCKLICH AUSGESCHLOSSEN, AUSSER IN LÄNDERN, IN DENEN EINE DERARTIGE EINSCHRÄNKUNG GESETZLICH VERBOTEN IST.** Je nach Land könnten Sie andere bestimmte gesetzliche Rechte haben.

Alle Garantieunterlagen finden Sie auf streamlight.com/support. Sie können Ihr Produkt auf streamlight.com registrieren (Online-Produktregistrierung). Bewahren Sie Ihre Quittung bzw. Ihren Kaufnachweis auf.

Die ProTac® 2.0 Rail Mount-Serie enthält nur wenige vom Benutzer zu wartende Teile.

Bei nötigen Reparaturen besuchen streamlight.com/support/service und füllen den Online-Reparaturauftrag aus, um eine Reparatur im Werk zu beauftragen oder eine Streamlight-Vertragswerkstatt in Ihrer Nähe zu finden.

Oder wenden Sie sich an:
Customer Service
© Streamlight, Inc.
30 Eagleville Road
Suite 100
Eagleville, PA 19403-3996, USA
Telefon: (800) 523-7488 gebührenfrei (nur in den USA) / +1 (610) 631-0600
Fax: (800) 220-7007 / +1 (610) 631-0712
E-Mail: cs@streamlight.com

*Alle Rechte vorbehalten. M-LOK® ist ein registriertes Warenzeichen der Magpul Industries Corp.

face cap. Wrap the face cap with electrical tape to avoid lead coating.

lens and face cap may become coated with lead. This may be removed from the lens by rubbing with fine steel wool. It is extremely difficult to remove the lead coating from the

If you shoot ammunition with an exposed lead base on the bullets, the

Avoid aggressive cleaning solutions as they may damage the flashlight.

free of dirt and grime.

first time. Use a soft cloth and mild detergent to clean the glass LED lens and keep it

series rail clamp tension bolt requires an application of high-quality gun oil to keep it

MAINTENANCE

It is important to keep the O-ring on the tail cap lubricated. The ProTac® 2.0 Rail Mount

switches are off.

Use the pad to initiate the desired mode and then depress the latching button for constant on operation. Note, constant on switches can conflict when using the latching

the programmable switch.
• Momentary/Latching version only: The smaller button functions the same as latching manner as a tap on the programmable switch.
• Both remote versions: The large pad on the remote switch functions in the same manner as a tap on the programmable switch.

The ProTac® 2.0 Rail Mount series may be used with an optional remote switch available in momentary-only and momentary/latching versions. To install a remote switch, insert the remote switch plug into the tail cap port. Mount remote switch to firearm as desired.

Available programs are High-Strobe (Factory Default), High only or Low-High.

(approximately 1 second), then release the switch.

tap) and hold it down the 10th time. Continue holding the switch until the light turns off starting from the "Off" position, tap the switch rapidly 9 times (within 0.4 seconds per

the user to select one of three different programs. To change to the next program, the ProTac® 2.0 Rail Mount series features a TEN-TAP® programmable switch allowing

Accessing Other Programs

- Strobe: Fast double-tap (within 0.4 seconds) and hold; click to lock on; click again for off.
- High: Tap and hold; click to lock on; click again for off.
- Tap and hold: click to lock on; click again for off.

The ProTac® 2.0 Rail Mount series features a programmable switch with momentary operation (light press or tap) and constant on operation (latching, press with increasing force until it clicks).

Streamlight warrants this product to be free of defects for a lifetime of use except

for batteries and bulbs, abuse and normal wear. We will repair, replace or refund the purchase price of this product should we determine it to be defective. This limited life-time warranty also excludes rechargeable batteries, chargers, switches and electronics which have a 2 year warranty with proof of purchase. **THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL OR SPECIFIC DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW.** You may have other specific legal rights which vary by jurisdiction.

Go to streamlight.com/support for a complete copy of the warranty. To register your product, go to streamlight.com (Online Product Registration). Retain your receipt or any proof of purchase.

Service Request for factory service or to find the location of an authorized Streamlight repair center near you.

The ProTac® 2.0 Rail Mount series contains few user-serviceable parts.

For service options, go to streamlight.com/support/service and complete the Online Service Request for factory service or to find the location of an authorized Streamlight repair center near you.

Streamlight Limited Lifetime Warranty


Streamlight warrants this product to be free of defects for a lifetime of use except for batteries and bulbs, abuse and normal wear. We will repair, replace or refund the purchase price of this product should we determine it to be defective. This limited life-time warranty also excludes rechargeable batteries, chargers, switches and electronics which have a 2 year warranty with proof of purchase. **THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL OR SPECIFIC DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW.** You may have other specific legal rights which vary by jurisdiction.

Go to streamlight.com/support for a complete copy of the warranty. To register your product, go to streamlight.com (Online Product Registration). Retain your receipt or any proof of purchase.

Service Request for factory service or to find the location of an authorized Streamlight repair center near you.

The ProTac® 2.0 Rail Mount series contains few user-serviceable parts.

For service options, go to streamlight.com/support/service and complete the Online Service Request for factory service or to find the location of an authorized Streamlight repair center near you.

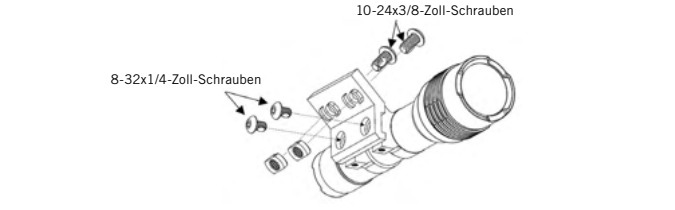

Bring in the holes on the M-LOK®-fastening over the holes on ProTac® 2.0 Rail Mount and pull the 8-32x1/4-Zoll-Schrauben with a 3/32-Zoll-Sechskantschlüssel fest.



Bring in the holes on the M-LOK®-fastening over the holes on ProTac® 2.0 Rail Mount and pull the 8-32x1/4-Zoll-Schrauben with a 3/32-Zoll-Sechskantschlüssel fest.

Um die M-LOK®-Halterung zu verwenden, tauschen Sie die 1913er-Schiene aus, indem Sie die zwei Befestigungsschrauben mit einem 2-mm-Sechskantschlüssel herausdrehen und die Rändelschraube vollständig lösen.

Um die M-LOK®-Halterung zu verwenden, tauschen Sie die 1913er-Schiene aus, indem Sie die zwei Befestigungsschrauben mit einem 2-mm-Sechskantschlüssel herausdrehen und die Rändelschraube vollständig lösen.

Um die M-LOK®-Halterung zu verwenden, tauschen Sie die 1913er-Schiene aus, indem Sie die zwei Befestigungsschrauben mit einem 2-mm-Sechskantschlüssel herausdrehen und die Rändelschraube vollständig lösen.

Um die M-LOK®-Halterung zu verwenden, tauschen Sie die 1913er-Schiene aus, indem Sie die zwei Befestigungsschrauben mit einem 2-mm-Sechskantschlüssel herausdrehen und die Rändelschraube vollständig lösen.

